

## FEED LEG DRILL

INDEX NO.	PART NO.	DESCRIPTION	QUAN. READ.	INDEX NO.	PART NO.	DESCRIPTION	QUAN. READ.
1	7825-01-010B	Back Head Assy (incl. 7825-01-015A, 7897-82-003A)	1	56	7825-30-0750	Valve Chest	1
2	7825-01-015A	Back Head Washer	1	57	7820-31-0000	Valve Gr.	1
3	78978-2-003A	Control Valve Bushing	1	58	7825-42-0810	Valve Key	1
4	7825-01-0020	Throttle Valve	1	59	7825-42-382B	Rifle Bar	1
5	7825-01-003C	Throttle Valve Handle	1	60	7825-42-083C	Rotation Pawl	4
6	7825-01-004C	Throttle Valve Plunger	1	61	7828-40-084A	Pawl Plunger	4
7	78981-7-0110	Throttle Valve Spring	1	62	7898-17-0840	Pawl Spring	4
8	7825-01-0060	Throttle Valve Bolt	1	63	7825-42-0860	Rotation Ratchet	1
9	9913-23-5000	Hex. Nut	1	64	7825-52-101B	Rifle Nut	1
10	9920-13-5000	Spring Washer	1	65	7825-52-303B	Piston	1
11	7825-01-808A	Hose Connection Tube	1	66	7831-61-414A	Rotation Sleeve	1
12	7825-01-8090	Hose Connection Cap	1	67	7848-61-515D	Sleeve Bushing (7/8" x 4-1/4")	1
13	7825-01-0110	Hose Connection Gasket	1		7848-63-515D	Sleeve Bushing (1" x 4-1/4")	1
14	9954-80-0210	O-Ring 21	1	68	7875-60-113C	Sleeve Nut	1
15	7897-82-004B	Feed Control Valve	1	69	7825-70-121A	Cap Nut	2
16	7898-17-1330	Control Valve Spring	1	70	7825-70-1230	Through Bolt	2
17	7898-17-024B	Valve Ratchet Spring	1	71	7827-81-240A	Front Head	1
18	7831-01-6010	Control Valve Handle	1	72	7827-81-232E	Steel Holder (7/8" x 4-1/4")	1
19	7831-01-6020	Control Valve Screw	1		7827-83-232B	Steel Holder (1" x 4-1/4")	1
20	7897-82-011A	Control Valve Set Screw	1	73	7827-81-239A	Front Head Bushing	1
21	7897-82-012A	Control Valve Ratchet	1	74	7827-81-233A	Steel Holder Plunger	1
22	7897-82-013A	Control Valve Pin	1	75	7827-81-234A	Steel Holder Pin	1
23	9954-80-0180	O-Ring 18	1	76	7898-17-1300	Steel Holder Spring	1
24	7825-08-250F	Mono Block Handle Assy (incl. 7828-05-024B, 9954-80-0050[2])	1	77	7827-81-235A	Key	1
25	7828-05-024B	Dust Seal	1	78	9957-43-0000	Retaining Ring	1
26	9954-80-0050	O-Ring 5	2	79	7827-81-2200	Plug Assy (incl. 7825-91-0170[3])	1
27	7825-08-027C	Release Valve	1	80	7827-81-200E	Front Head Gr.	1
28	7898-17-0890	Release Valve Spring	1	81	7896-02-5310	Water Connection Tube I	1
29	7825-08-029A	Release Valve Retainer	1	82	7896-01-0330	Water Connection Tube II	1
30	9957-41-8000	Snap Ring	1	83	9954-80-0100	O-Ring 10	2
31	7825-08-000C	Mono Block Handle Gr.	1	84	7896-01-032A	Water Connection Nut	1
32	7825-10-031A	Water Tube Gland	1	85	7825-02-0140	Set Screw Gasket	1
33	7825-10-0330	Tube Gland Gasket	1	86	7898-07-4010	Water Hose	1
34	7825-10-0340	Tube Gasket	1	87	7896-01-0040	Hose Clamp Band	2
35	7825-10-0350	Tube Washer	1	88	7896-02-5350	Water Hose Stem I	1
36	7825-10-036D	Water Tube	1	89	7896-01-036A	Water Hose Stem II	1
37	9954-80-0180	O-Ring 18	2	90	9954-81-0520	O-Ring 10520	1
38	7825-10-032F	Water Valve Piston	1	91	9954-10-0901	O-Ring 901	1
39	9954-80-0030	O-Ring 3	1	92	7896-01-034B	Water Hose Stem Cap	1
40	7898-17-0260	Water Valve Spring	1	93	7896-01-0100	Water Connection Screen	1
41	7825-10-0380	Valve Spring Retainer	1	94	9954-80-0050	O-Ring 5	1
42	7825-10-039A	Water Valve Retainer Ring	1	95	7896-01-020B	Water Valve Assy.	1
43	7825-10-0410	Water Valve Seat	1	96	7896-02-5000	Water Hose Connection Gr.	1
44	7825-10-042B	Water Valve Seat Retainer	1				
45	7825-10-0000	Water Tube Gr.	1				
46	7825-20-050F	Cylinder	1				
47	7825-20-063A	Blow Air Connection	1				
48	7898-17-0220	Blow Air Connection Spring	1				
49	9954-80-0120	O-Ring 12	1				
50	7825-20-065A	Feed Air Connection	1				
51	7827-20-0680	Front Washer Bearing	1				
52	7825-21-669A	Front Washer	1				
53	7825-30-0710	Valve Chest Cover	1				
54	7820-30-0720	Valve Guide	1				
55	7820-31-0730	Valve	1				

MODEL CLD-24

CONTINENTAL POWER TOOL

FEED LEG DRILL

