
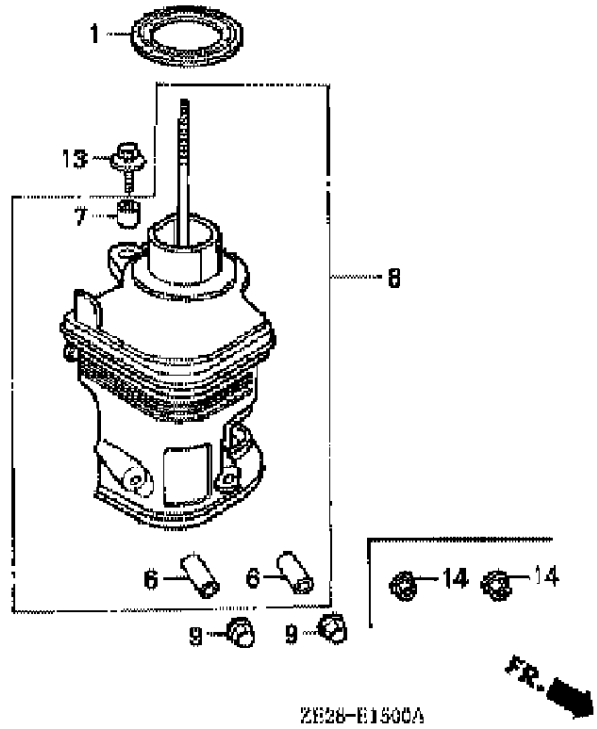



FR. 

Ref #	Part Number	Qty	Description
1	11500-ZE2-620	1	COVER ASSY., REDUCTION CASE (Honda Code 2025286)
			GX240K1 HA ENGINE, JPN, VIN# GC04-3000001 TO GC04-39455452 of 36
2	11621-ZE2-600	1	GASKET, CHAIN CASE COVER (Honda Code 3678513).
3	22103-ZE2-620	1	GEAR, PRIMARY DRIVE (17T) (Honda Code 2026284).
4	23220-ZE2-621	1	COUNTERSHAFT (Honda Code 3682044).
5	23710-ZE2-621	1	SHAFT, P.T.O. (H-TYPE) (Honda Code 3304573).
6	90401-ZE2-620	AR	SHIM A (Optional). (Honda Code 3499753).
7	90402-ZE2-620	AR	SHIM B (Optional). (Honda Code 3499761).
8	90473-842-000	1	WASHER (8MM) (Honda Code 0323295).
9	90745-ZE2-600	1	KEY (6.3X6.3X43) (Honda Code 2027167).
10	91201-890-003	1	OIL SEAL (30X46X8) (Honda Code 0756494).
11	94301-08140	2	PIN A, DOWEL (8X14) (Honda Code 0069310).
12	95701-08025-00	1	BOLT, FLANGE (8X25) (Honda Code 2545325).
13	95700-08040-00	6	BOLT, FLANGE (8X40) (Honda Code 0671222).
13	95701-08040-00	6	BOLT, FLANGE (8X40) (Honda Code 2298404).
14	96100-62060-00	1	BEARING, RADIAL BALL (6206) (Honda Code 0636118).
15	96100-63020-00	1	BEARING, RADIAL BALL (6302) (Honda Code 0834176).

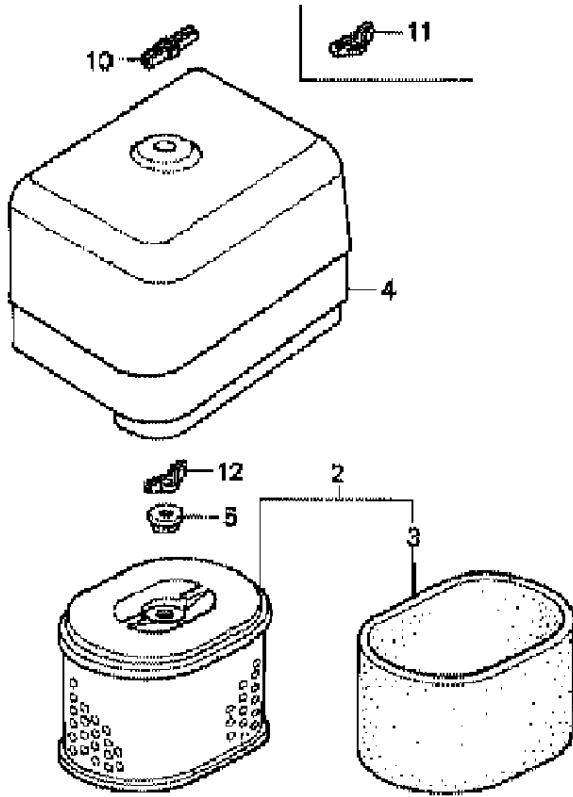


ZE28-E1900A

Ref #	Part Number	Qty	Description
1	16271-ZE2-000	1	GASKET, ELBOW (Honda Code 2025948).
2	17210-ZE2-505	1	ELEMENT, AIR CLEANER (DUAL) (Honda Code 5266721).
	GZX240K1 HA ENGINE, JPN, VIN# GC04-3000001 TO GC04-3045454		
	AIR CLEANER (DUAL)		
2	17210-ZE2-822	1	ELEMENT, AIR CLEANER (DUAL) (Honda Code 2893899).
3	17218-ZE2-505	1	FILTER (OUTER) (Honda Code 5196308).
3	17218-ZE2-821	1	FILTER (OUTER) (Honda Code 2538429).
4	17231-ZH9-820	1	COVER, AIR CLEANER (Honda Code 3690054).
5	17232-891-000	1	GROMMET, AIR CLEANER (Honda Code 0999763).
6	17238-ZE2-310	2	COLLAR, AIR CLEANER (Honda Code 2384105).
7	17239-ZE1-000	1	COLLAR B, AIR CLEANER (Honda Code 1427533).
8	17410-ZE2-020	1	ELBOW, AIR CLEANER (Honda Code 2414290).
9	90201-415-000	2	NUT, CAP (6MM) Use up to Engine SN 3165402. (Honda Code 0670729).
10	90203-PB2-000	1	WINGNUT, AIR CLEANER COVER Use up to Engine SN 3116850. (Honda Code 0994855).
10	90203-ZA0-800	1	WINGNUT (6MM) Use from Engine SN 3116851 to 3268966. (Honda Code 1742238).
12	90325-044-000	1	WINGNUT, TOOL BOX SETTING (Honda Code 0127720).
13	93404-06020-08	1	BOLT-WASHER (6X20) (Honda Code 2410694).
13	93494-06020-08	1	BOLT-WASHER (6X20) (Honda Code 0468421).
14	94050-06000	2	NUT, FLANGE (6MM) Use from Engine SN 3165403. (Honda Code 0471623).

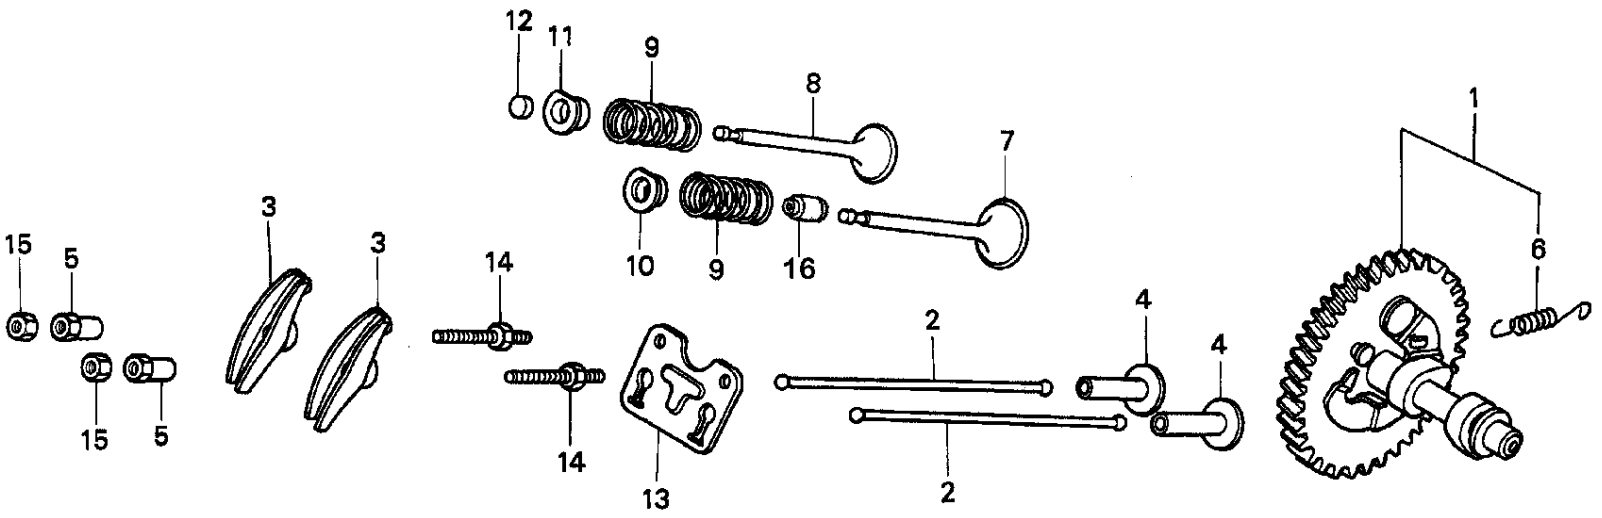

FR. →


Ref #	Part Number	Qty	Description
1	14100-ZH9-000	1	CAMSHAFT ASSY. Use up to Engine SN 3620888. (Honda Code 3678588).
GX240K1 HA ENGINE, JPN, VIN# GC04-300001 TO GC04-3945456 of 36			
1	14100-ZH9-010	1	CAMSHAFT ASSY. Use from Engine SN 3620889. (Honda Code 5813050).
1	14100-ZH9-305	1	CAMSHAFT ASSY. Use up to Engine SN 3620888. (Honda Code 4728838).
2	14410-ZE2-013	2	ROD, PUSH (Honda Code 3337169).
3	14431-ZE2-000	2	ARM, VALVE ROCKER (Honda Code 2025591).
3	14431-ZE2-010	2	ARM, VALVE ROCKER (Honda Code 6206254).
4	14441-ZE2-000	2	LIFTER, VALVE (Honda Code 2025609).
5	14451-ZE1-003	2	PIVOT, ROCKER ARM Use up to Engine SN 3143190. (Honda Code 1540764).
5	14451-ZE1-013	2	PIVOT, ROCKER ARM (Honda Code 4300901).
6	14568-ZE1-000	1	SPRING, WEIGHT RETURN (Honda Code 1426907).
7	14711-ZE2-000	1	VALVE, IN. (Honda Code 2025617).
8	14721-ZE2-000	1	VALVE, EX. (Honda Code 2025625).
9	14751-ZE2-003	2	SPRING, VALVE (Honda Code 2025633).
10	14771-ZE2-000	1	RETAINER, IN. VALVE SPRING (Honda Code 2025641).
11	14773-ZE2-000	1	RETAINER, EX. VALVE SPRING (Honda Code 2025658).
12	14781-ZE2-000	1	ROTATOR, VALVE (Honda Code 2025666).
13	14791-ZE2-010	1	PLATE, PUSH ROD GUIDE (Honda Code 3707494).
14	90012-ZE0-010	2	BOLT, PIVOT (8MM) (Honda Code 1756964).
15	90206-ZE1-000	2	NUT, PIVOT ADJ. (Honda Code 1431287).

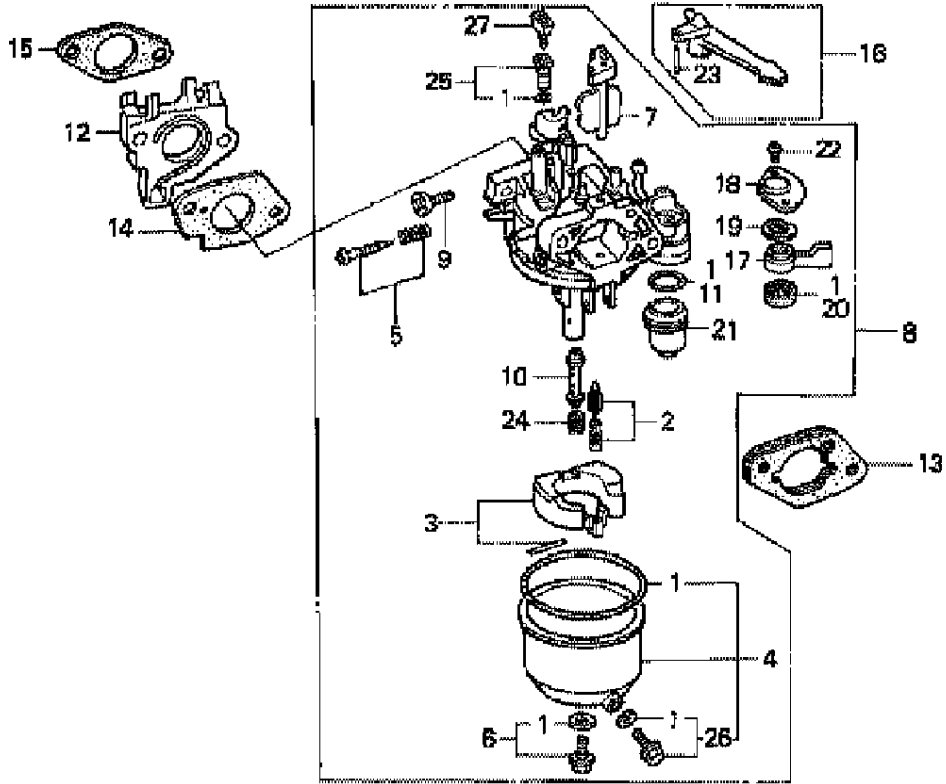

2E28-E1400A


FR.

Ref #	Part Number	Qty	Description
1	16010-ZE2-812	1	GASKET SET (Honda Code 3511383).
2	16011-ZA0-931	1	VALVE SET, FLOAT (Honda Code 2059236).
3	16013-ZA0-931	1	FLOAT SET (Honda Code 2059244).
4	16015-ZE2-005	1	CHAMBER SET, FLOAT Use up to Engine SN 3453255. (Honda Code 2157493).
4	16015-ZE8-005	1	CHAMBER SET, FLOAT (Honda Code 2089993).
5	16016-ZE0-005	1	SCREW SET, PILOT (Honda Code 1441500).
6	16028-ZE0-005	1	SCREW SET B (Honda Code 1441518).
7	16044-ZE2-005	1	CHOKE SET (Honda Code 2090017).
8	16100-ZE2-W31	1	CARBURETOR ASSY. (BE15G A) (Honda Code 5163589).
9	16124-ZE0-005	1	SCREW, THROTTLE STOP (Honda Code 1441559).
10	16166-ZE2-015	1	NOZZLE, MAIN (Honda Code 2157543).
11	16173-001-004	1	GASKET, FUEL STRAINER CUP (Honda Code 0005652).
12	16211-ZE2-000	1	INSULATOR, CARBURETOR (Honda Code 2025906).
13	16220-ZA0-702	1	SPACER, CARBURETOR (Honda Code 2686533).
14	16221-ZA0-800	1	GASKET, CARBURETOR (Honda Code 3678620).
15	16223-ZA0-800	1	GASKET, INSULATOR (Honda Code 3678638).
16	16610-ZE1-000	1	LEVER, CHOKE (STD) (Honda Code 1440114).
17	16953-ZE1-406	1	LEVER, VALVE Use up to Engine SN 3453255. (Honda Code 5167358).
17	16953-ZE1-811	1	LEVER, VALVE Use up to Engine SN 3453255. (Honda Code 1819986).
17	16953-ZE1-812	1	LEVER, VALVE Use from Engine SN 3453256. (Honda Code 5140876).
18	16954-ZE1-812	1	PLATE, LEVER SETTING (Honda Code 5148135).
19	16956-ZE1-811	1	SPRING, VALVE LEVER (Honda Code 1807809).
20	16957-ZE1-812	1	GASKET, VALVE (Honda Code 3440708).
21	16967-ZE0-811	1	CUP, FUEL STRAINER (Honda Code 1441583).
22	93500-03006-OH	2	SCREW, PAN (3X6) Use from Engine SN 3453256. (Honda Code 0561654).
22	93500-03008-OG	2	SCREW, PAN (3X8) Use up to Engine SN 3453255. (Honda Code 0420505).
23	94305-20122	1	PIN, SPRING (2X12) (Honda Code 1441591).
24	99101-ZF5-0800	1	JET, MAIN (#80) (Optional). (Honda Code 3679040).
24	99101-ZF5-0820	1	JET, MAIN (#82) (Optional). (Honda Code 3679057).
24	99101-ZF5-0850	1	JET, MAIN (#85) (Honda Code 3679065).
25	99204-ZE2-0380	1	JET SET, PILOT (#38) (Honda Code 2159820).

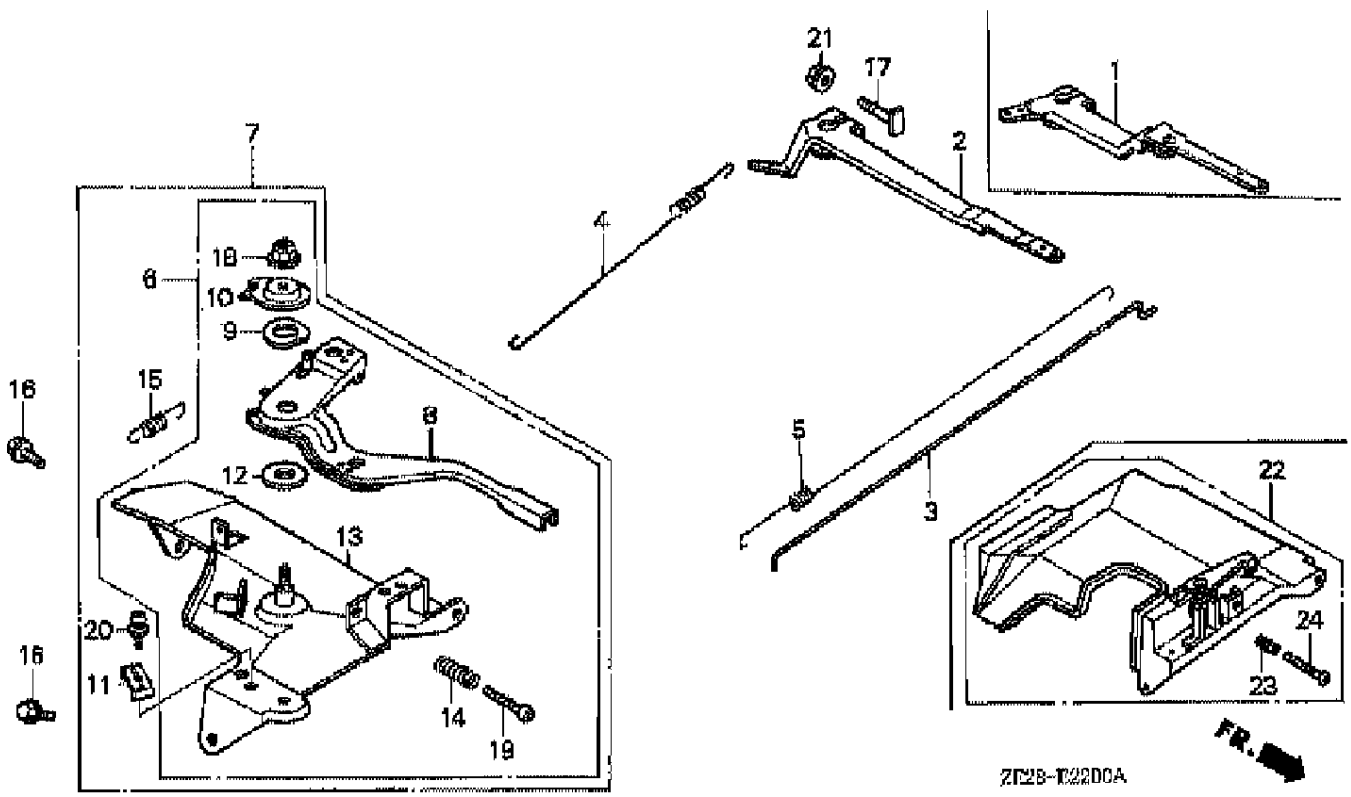

Ref #	Part Number	Qty	Description
2	16551-ZE2-000	1	ARM, GOVERNOR (Honda Code 2026003).
3	16555-ZE2-000	1	ROD, GOVERNOR (Honda Code 2026011).
4	16561-ZE2-000	1	SPRING, GOVERNOR (Honda Code 2026029).
5	16562-ZE2-000	1	SPRING, THROTTLE RETURN (Honda Code 2026037).
6	16570-ZE2-W00	1	CONTROL ASSY. (Honda Code 3678646).
8	16571-ZE2-W00	1	LEVER, CONTROL (Honda Code 3678661).
9	16574-ZE1-000	1	SPRING, LEVER (Honda Code 1427384).
10	16575-ZE2-W00	1	WASHER, CONTROL LEVER (Honda Code 3678679).
12	16578-ZE1-000	1	SPACER, CONTROL LEVER (Honda Code 1427400).
13	16581-ZE2-W00	1	BASE, CONTROL (Honda Code 3678687).
14	16584-883-300	1	SPRING, CONTROL ADJUSTING (Honda Code 0636431).
16	90013-883-000	2	BOLT, FLANGE (6X12) (CT200) Use up to Engine SN 3566749. (Honda Code 0636845).
17	90015-ZE5-010	1	BOLT, GOVERNOR ARM (Honda Code 2418671).
18	90114-SA0-000	1	NUT, SELF-LOCK (6MM) (Honda Code 1410182).
19	93500-05028-0A	1	SCREW, PAN (5X28) (Honda Code 0171819).
21	94050-06000	1	NUT, FLANGE (6MM) (Honda Code 0471623).








6X240K1 HA ENGINE, JPN, VIN# GC04-3000001 TO GC04-3940000 Page 56 of 56

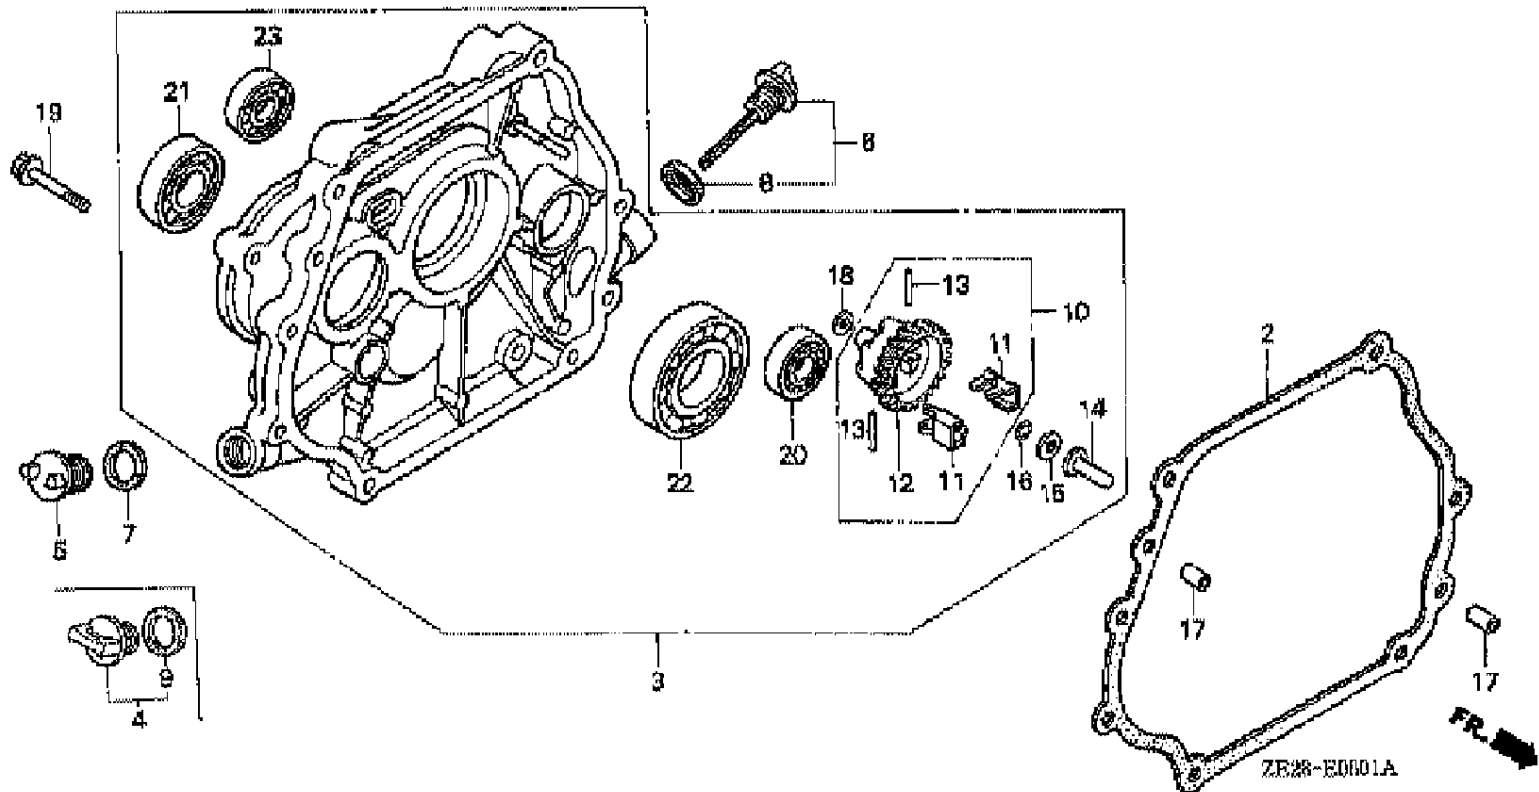

Ref #	Part Number	Qty	Description
2	11381-ZE2-800	1	GASKET, CASE COVER (Honda Code 3678505).
2	11381-ZE2-801	1	GASKET, CASE COVER (Honda Code 6436851).
3	11490-ZE2-021	1	COVER ASSY., CRANKCASE (H-TYPE)(BALANCER) (Honda Code 3689502).
4	15600-ZG4-003	1	CAP ASSY., OIL FILLER Use up to Engine SN 3210413. (Honda Code 4497921).
5	15620-ZG4-910	1	CAP, OIL FILLER Use from Engine SN 3210414. (Honda Code 3678596).
6	15600-735-003	1	CAP ASSY., OIL FILLER (Honda Code 4523106).
7	15621-896-010	1	GASKET, OIL FILLER CAP Use up to Engine SN 3210413. (Honda Code 1033042).
8	15625-ZE1-000	1	GASKET, OIL FILLER CAP Use up to Engine SN 2901132. (Honda Code 1427079).
8	15625-ZE1-003	1	GASKET, OIL FILLER CAP (Honda Code 4497947).
9	15625-ZE1-003	1	GASKET, OIL FILLER CAP Use from Engine SN 3210414. (Honda Code 4497947).
10	16510-ZE2-811	1	GOVERNOR ASSY. (BALANCER) (Optional). (Honda Code 3690005).
11	16511-ZE2-000	2	WEIGHT, GOVERNOR (Honda Code 2025955).
12	16512-ZE2-811	1	HOLDER, GOVERNOR WEIGHT (Honda Code 3682010).
13	16513-ZE2-000	2	PIN, GOVERNOR WEIGHT (Honda Code 2025971).
14	16531-ZE2-000	1	SLIDER, GOVERNOR (Honda Code 2025989).
15	90473-147-000	1	WASHER (6X16) (Optional). Use up to Engine SN 3190534. (Honda Code 0465591).
16	90602-ZE1-000	1	CLIP, GOVERNOR HOLDER (Honda Code 2456697).
17	90701-HC4-000	2	PIN, DOWEL (8X12) (Honda Code 2978443).
18	94101-06800	1	WASHER, PLAIN (6MM) (Honda Code 0345900).
19	95701-08035-00	7	BOLT, FLANGE (8X35) (Honda Code 2724029).
20	96100-62020-00	1	BEARING, RADIAL BALL (6202) (Honda Code 0708941).
21	96100-62040-00	1	BEARING, RADIAL BALL (6204) (Honda Code 0674390).
22	96100-62060-00	1	BEARING, RADIAL BALL (6206) (Honda Code 0636118).
23	96100-63020-00	1	BEARING, RADIAL BALL (6302) (Honda Code 0834176).

GC04-3000001 TO GC04-3000002 of 38

GC04-3000001 TO GC04-3000002 of 38

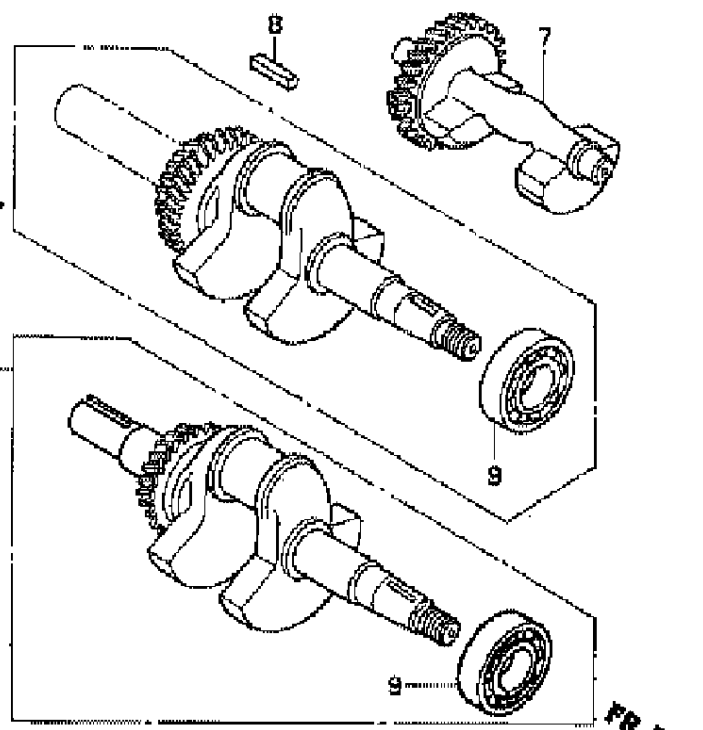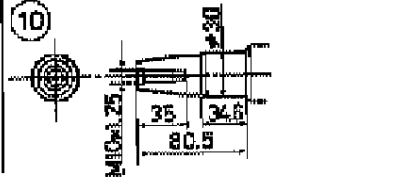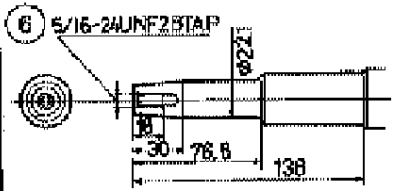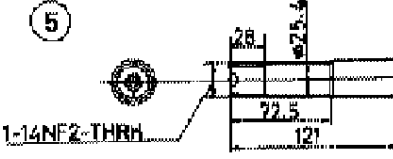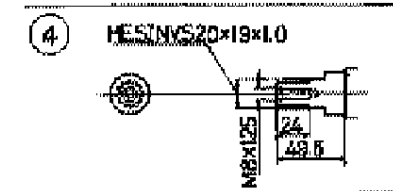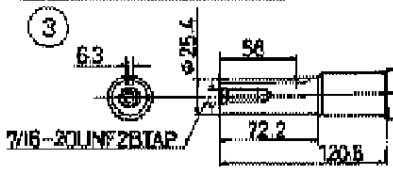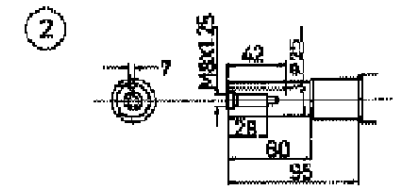


Z3C28-E0700A


Ref #	Part Number	Qty	Description
4	13320-ZE2-611	1	CRANKSHAFT (L-TYPE) (Honda Code 3735198).
7	13351-ZF2-010	1	WEIGHT BALANCER (Honda Code 3689817).
8	90745-ZE2-600	1	KEY (6.3X6.3X43) (Honda Code 2027167).
9	96100-62060-00	1	BEARING, RADIAL BALL (6206) (Honda Code 0636118).

3X240RT HA ENGINE, JPN, VIN# GC04-3000001 TO GC04-3940004 of 38

CRANKSHAFT

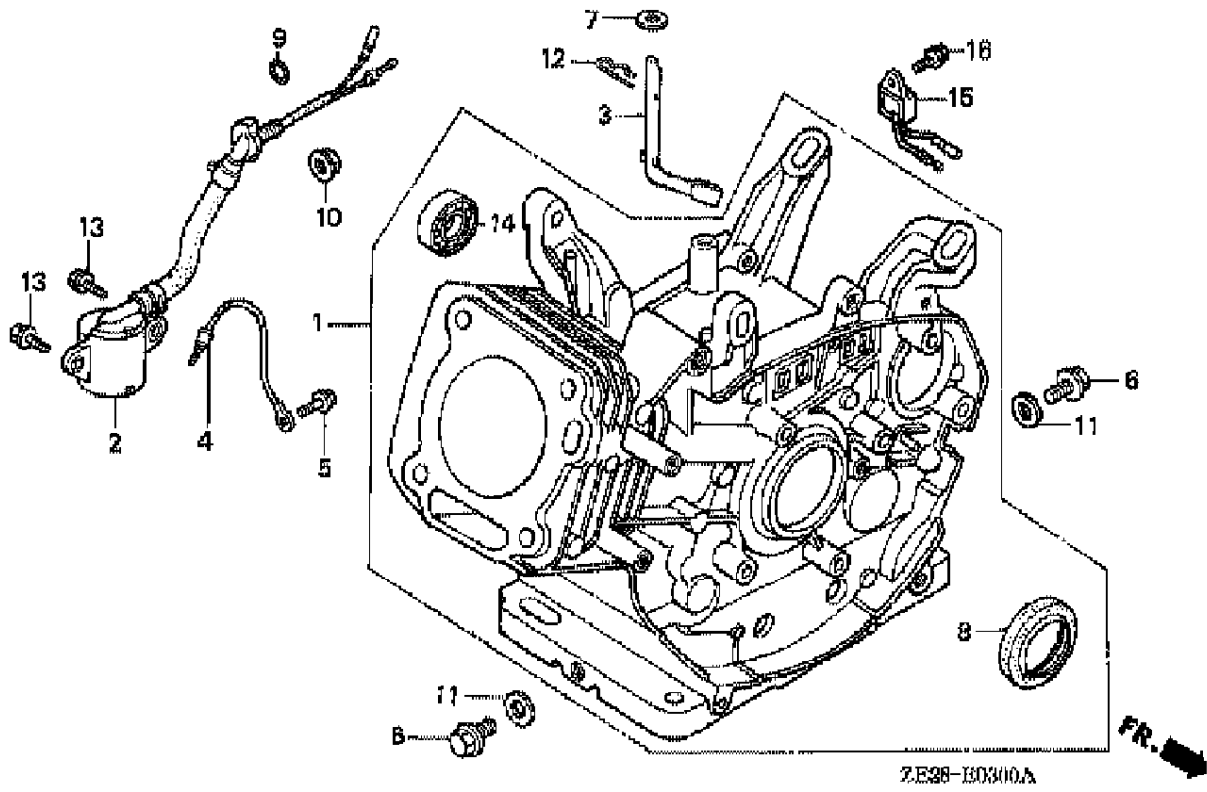


Ref #	Part Number	Qty	Description
1	12000-ZE2-834	1	CYLINDER ASSY. (BALANCER+OIL ALERT) (Honda Code 4785721)
			GX240K1 HA ENGINE, JPN, VIN# GC04-3000061 TO GC04-3945456 of 36
2	15510-ZE2-023	1	SWITCH ASSY., OIL LEVEL Use up to Engine SN 3566259. (Honda Code 4193736).
2	15510-ZE2-033	1	SWITCH ASSY., OIL LEVEL Use up to Engine SN 3566259. (Honda Code 5361605).
2	15510-ZE2-033	1	SWITCH ASSY., OIL LEVEL Use from Engine SN 3566260. (Honda Code 5361605).
2	15510-ZE2-043	1	SWITCH ASSY., OIL LEVEL Use up to Engine SN 3566259. (Honda Code 5792361).
2	15510-ZE2-043	1	SWITCH ASSY., OIL LEVEL Use from Engine SN 3566260. (Honda Code 5792361).
3	16541-ZE2-010	1	SHAFT, GOVERNOR ARM (Honda Code 4723227).
4	32197-ZE2-003	1	SUB-HARNESS Use from Engine SN 3116815 to 3566259. (Honda Code 4220406).
5	90013-883-000	1	BOLT, FLANGE (6X12) (CT200) Use from Engine SN 3116815 to 3566259. (Honda Code 0636845).
6	90131-896-650	2	BOLT, DRAIN PLUG (Honda Code 1986231).
7	90446-KE1-000	1	WASHER (8.2X17X0.8) (Honda Code 2027134).
8	91201-890-003	1	OIL SEAL (30X46X8) (Honda Code 0756494).
9	91353-671-003	1	O-RING (13.5X1.5) (ARAI) (Honda Code 0949883).
10	94050-10000	1	NUT, FLANGE (10MM) (Honda Code 0483867).
11	94109-12000	2	WASHER, DRAIN PLUG (12MM) (Honda Code 0171868).
12	94251-08000	1	PIN, LOCK (8MM) Use up to Engine SN 3332421. (Honda Code 0115527).
12	94251-10000	1	PIN, LOCK (10MM) Use from Engine SN 3332422. (Honda Code 0159269).
13	95700-06012-00	2	BOLT, FLANGE (6X12) (Honda Code 0487025).
13	95701-06012-00	2	BOLT, FLANGE (6X12) (Honda Code 2105799).
14	96100-62020-00	1	BEARING, RADIAL BALL (6202) (Honda Code 0708941).

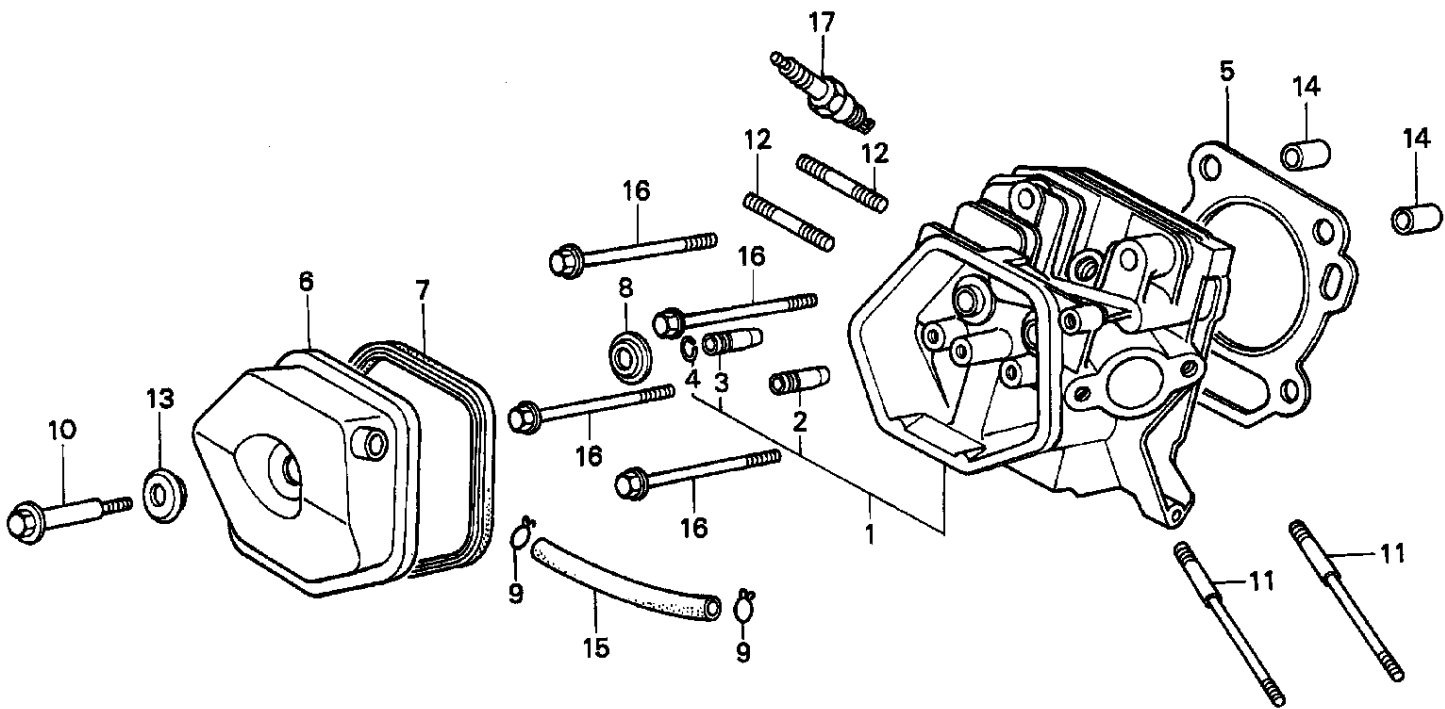







FR. →

Ref #	Part Number	Qty	Description
1	12200-ZH9-000	1	CYLINDER HEAD (Honda Code 4475349).
2	12204-ZE2-306	1	GUIDE, VALVE (OS) (Optional). (Honda Code 4179164).
	GX240RT HA ENGINE, JPN, VIN# GC04-5000001 TO GC04-3940045 of 36		
2	12204-ZE2-315	1	GUIDE, VALVE (OS) (Optional). Use up to Engine SN 3102862. (Honda Code 2089555).
3	12205-ZE2-305	1	GUIDE, EX. VALVE (OS) (Optional). (Honda Code 2089563).
4	12216-ZE2-300	1	CLIP, VALVE GUIDE (Honda Code 2089597).
5	12251-ZE2-800	1	GASKET, CYLINDER HEAD (Honda Code 3678539).
6	04108-ZE2-000	1	COVER KIT, HEAD Use up to Engine SN 3146326. (Honda Code 4342820).
6	12310-ZE2-010	1	COVER, HEAD Use up to Engine SN 3146326. (Honda Code 2157352).
6	12310-ZE2-020	1	COVER, HEAD Use from Engine SN 3146327. (Honda Code 4300885).
7	12391-ZE2-010	1	GASKET, CYLINDER HEAD COVER Use up to Engine SN 3146326. (Honda Code 2395499).
7	12391-ZE2-020	1	GASKET, CYLINDER HEAD COVER (Honda Code 4300893).
8	14775-ZE2-010	1	SEAT, VALVE SPRING (Honda Code 2157485).
10	90014-ZE2-000	1	BOLT, HEAD COVER (Honda Code 2027035).
11	90042-ZE2-000	2	BOLT, STUD (8X123) (Honda Code 2027043).
12	90047-ZE2-000	2	BOLT, STUD (8X47) (Honda Code 2027050).
13	90441-ZE2-010	1	WASHER, HEAD COVER (Honda Code 2293918).
14	94301-12200	2	PIN A, DOWEL (12X20) (Honda Code 0165324).
15	95005-11001-30M	1	BULK HOSE, VACUUM (11X1000) (11X100) Use from Engine SN 3454868. (Honda Code 4537312).
15	95005-11001-30M	1	BULK HOSE, VACUUM (11X1000) (11X105) Use up to Engine SN 3454867. (Honda Code 4537312).
16	95701-10080-00	4	BOLT, FLANGE (10X80) (Honda Code 2545341).
16	95725-10080-00	4	BOLT, FLANGE (10X80) (Honda Code 2027316).
17	98079-55846	1	SPARK PLUG (BPR5ES) (NGK) (Optional). (Honda Code 1672443).
17	98079-55855	1	SPARK PLUG (W16EPR-U) (DENSO) (Optional). (Honda Code 1672450).
17	98079-56846	1	SPARK PLUG (BPR6ES) (NGK) (Honda Code 1441112).
17	98079-56855	1	SPARK PLUG (W20EPR-U) (DENSO) (Honda Code 1441120).

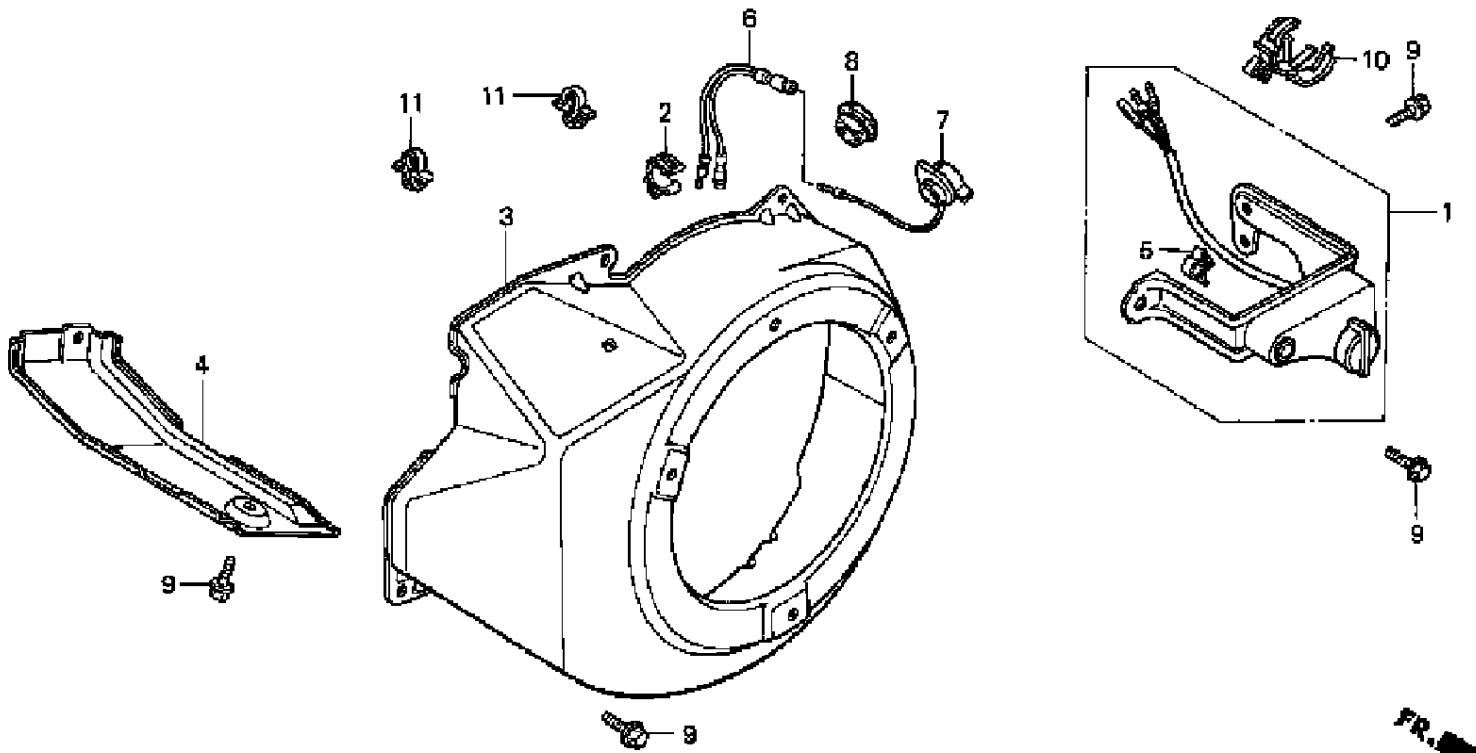


ZB28-E1200A

Ref #	Part Number	Qty	Description
1	15520-ZE2-003	1	ALERT UNIT, OIL Use up to Engine SN 3116814. (Honda Code 2025690).
	GX240K1 HA ENGINE, JPN, VIN# GC04-300001 TO GC04-3945420 of 36		
2	16731-ZE2-003	1	CLIP, TUBE (Honda Code 2026094).
3	19610-ZE2-010ZA	1	COVER, FAN *R8* (BRIGHT RED) (Honda Code 4330981).
3	19610-ZE2-010ZC	1	COVER, FAN *NH1* (BLACK) Use from Engine SN 3139635. (Honda Code 4330999).
4	19631-ZE2-D00	1	SHROUD (Honda Code 4024949).
4	19631-ZH9-000	1	SHROUD Use up to Engine SN 3531192. (Honda Code 3678828).
5	30701-883-000	1	CLIP, IGNITION WIRE (8MM) Use up to Engine SN 3116814. (Honda Code 0636787).
6	32197-ZH8-003	1	SUB-HARNESS Use from Engine SN 3116815 to 3566259. (Honda Code 4193082).
7	36100-ZE1-015	1	SWITCH ASSY., ENGINE STOP Use from Engine SN 3116815 to 3566259. (Honda Code 2787869).
7	36100-ZH7-003	1	SWITCH ASSY., ENGINE STOP Use from Engine SN 3566260. (Honda Code 5266184).
8	81329-567-020	1	GROMMET, DRAIN HOLE Use up to Engine SN 3116814. (Honda Code 0677773).
9	90013-883-000	9	BOLT, FLANGE (6X12) (CT200) Use up to Engine SN 3116814. (Honda Code 0636845).
9	90013-883-000	7	BOLT, FLANGE (6X12) (CT200) Use from Engine SN 3116815 to 3566749. (Honda Code 0636845).
10	90684-ZA0-601	1	CLIP, WIRE HARNESS (Honda Code 2539138).

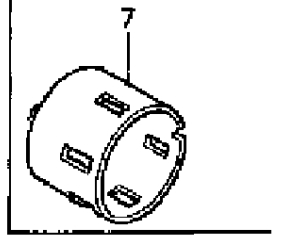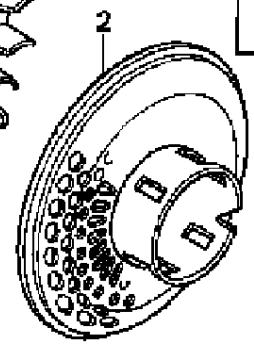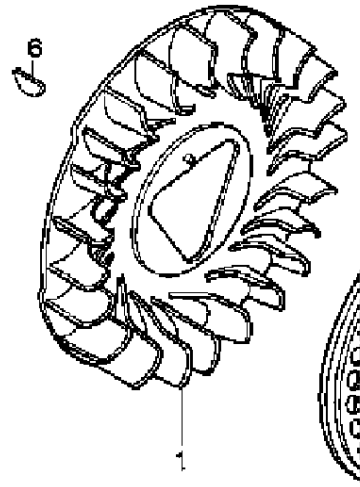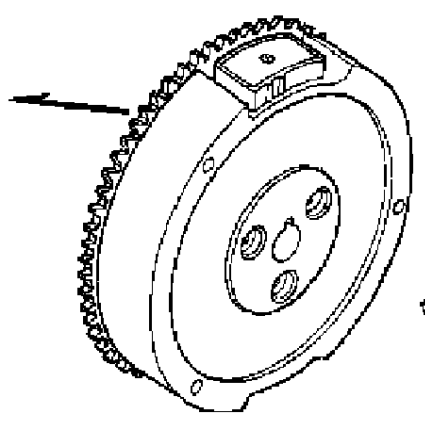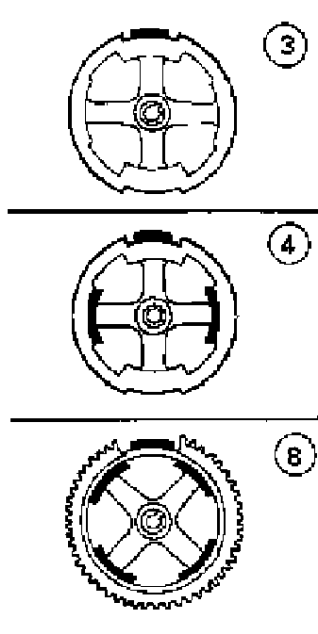

Ref #	Part Number	Qty	Description
1	19511-ZE2-000	1	FAN, COOLING (Honda Code 2026250).
2	28450-ZE2-W11 GX240K1 YA ENGINE, JPN, VIN# GC04-500001 TO GC04-59445 FLYWHEEL	1	PULLEY, STARTER (SCREEN GRID) (Honda Code 3678935).
3	31100-ZE2-010	1	FLYWHEEL (Honda Code 5339486).
5	90201-ZE3-V00	1	NUT, SPECIAL (16MM) (1) Use from Engine SN 3467139. (Honda Code 5032727).
5	90201-ZE3-790	1	NUT, SPECIAL (16MM) Use up to Engine SN 3467138. (Honda Code 2326908).
6	90741-ZE2-000	1	KEY, SPECIAL WOODRUFF (25X18) (Honda Code 2027159).

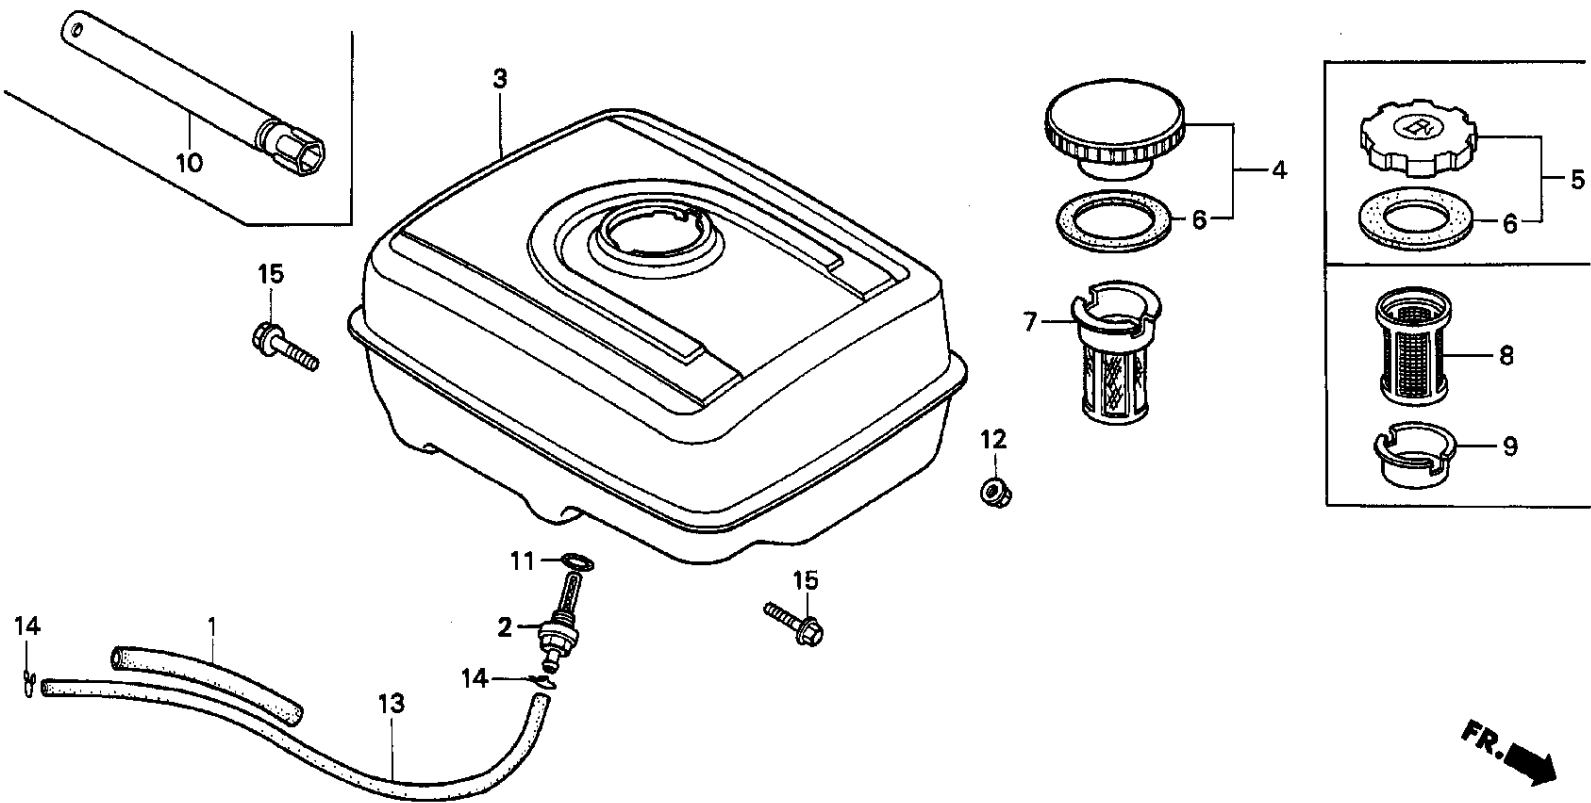


FR. →

Ref #	Part Number	Qty	Description
1	16854-ZE1-000	1	RUBBER, SUPPORTER Use up to Engine SN 3032265. (Honda Code 1436674).
			GX240K1 HA ENGINE, JPN, VIN# GC04-300001 TO GC04-394624 of 36
1	16854-ZH8-000	1	RUBBER, SUPPORTER (107MM) (Honda Code 3683646).
2	16955-ZE1-000	1	JOINT, FUEL TANK (Honda Code 1427459).
3	17510-ZE2-010ZA	1	TANK, FUEL *NH31* (MCKINLEY WHITE) (Honda Code 3690070).
3	17510-ZE2-010ZD	1	TANK, FUEL *NH1* (BLACK) Use from Engine SN 3139635. (Honda Code 4220034).
4	17620-ZE2-W00	1	CAP, FUEL FILLER Use up to Engine SN 3254423. (Honda Code 3682028).
5	17620-ZH7-023	1	CAP, FUEL FILLER Use from Engine SN 3254424. (Honda Code 5344817).
6	17631-ZH7-003	1	GASKET, FUEL FILLER CAP Use from Engine SN 3254424. (Honda Code 4608725).
6	17631-329-003	1	GASKET, FUEL FILLER CAP Use up to Engine SN 3254423. (Honda Code 2820587).
7	17672-ZE2-W00	1	FILTER, FUEL Use up to Engine SN 3118369. (Honda Code 3678703).
7	17672-ZE2-W01	1	FILTER, FUEL Use up to Engine SN 3118369. (Honda Code 4270864).
7	17672-ZE2-W01	1	FILTER, FUEL Use from Engine SN 3190917. (Honda Code 4270864).
8	17672-880-000	1	FILTER, FUEL Use from Engine SN 3118370 to 3190916. (Honda Code 0474759).
9	17673-893-000	1	HOLDER, FUEL FILTER Use from Engine SN 3118370 to 3190916. (Honda Code 0788109).
10	89218-ZE1-000	1	WRENCH, SPARK PLUG (Honda Code 1431048).
11	91353-671-003	1	O-RING (13.5X1.5) (ARAI) (Honda Code 0949883).
12	94050-08000	2	NUT, FLANGE (8MM) (Honda Code 0481143).
13	95001-45003-60M	1	BULK HOSE, FUEL (4.5X3000) (4.5X222) (Honda Code 5137104).
14	95002-02080	2	CLIP, TUBE (B8) (Honda Code 0250647).
15	95701-08025-00	2	BOLT, FLANGE (8X25) (Honda Code 2545325).

**No Artwork
Available**




Ref #	Part Number	Qty	Description
	061C1-ZE2-820	1	GASKET KIT Use from Engine SN 3146327. (Honda Code 4475232)
	GX240K1 HA ENGINE, JPN, VIN# GC04-300001 TO GC04-3945426 of 36		
	061A1-ZE2-405	1	GASKET KIT Use up to Engine SN 3146326. (Honda Code 5198940).
1	11381-ZE2-800	1	GASKET, CASE COVER (Honda Code 3678505).
1	11381-ZE2-801	1	GASKET, CASE COVER (Honda Code 6436851).
2	12251-ZE2-800	1	GASKET, CYLINDER HEAD (Honda Code 3678539).
3	12391-ZE2-010	1	GASKET, CYLINDER HEAD COVER Use up to Engine SN 3146326. (Honda Code 2395499).
3	12391-ZE2-020	1	GASKET, CYLINDER HEAD COVER Use from Engine SN 3146327. (Honda Code 4300893).
3	12391-ZE2-020	1	GASKET, CYLINDER HEAD COVER Use up to Engine SN 3146326. (Honda Code 4300893).
4	15621-896-010	1	GASKET, OIL FILLER CAP (Honda Code 1033042).
5	15625-ZE1-000	1	GASKET, OIL FILLER CAP (Honda Code 1427079).
5	15625-ZE1-003	1	GASKET, OIL FILLER CAP (Honda Code 4497947).
6	16221-ZA0-800	1	GASKET, CARBURETOR (Honda Code 3678620).
7	16223-ZA0-800	1	GASKET, INSULATOR (Honda Code 3678638).
9	18333-ZE3-800	1	GASKET, EX. PIPE (Honda Code 3520194).
9	18333-ZK6-Y00	1	GASKET, EX. PIPE (WACKER) (Honda Code 5164199).

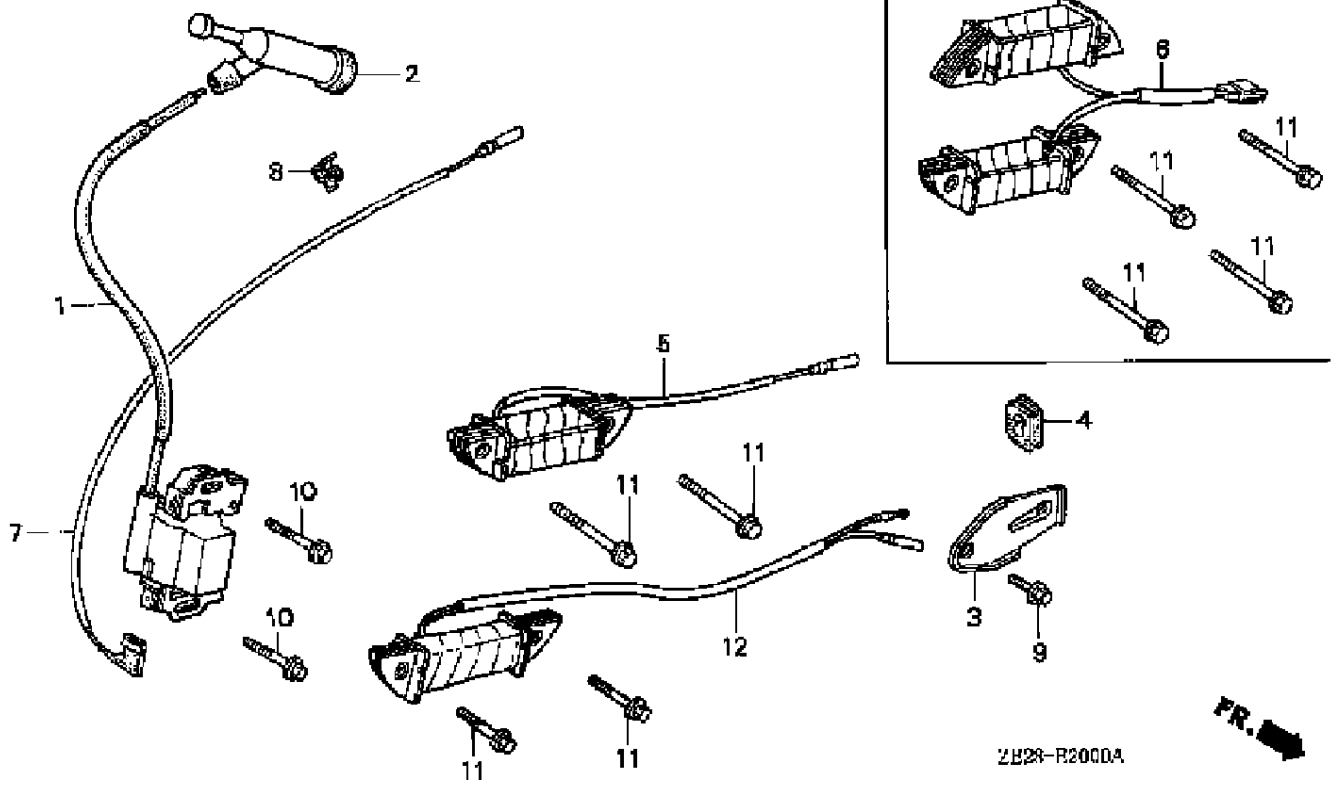


ZB28-R2000A

FR.

Ref #	Part Number	Qty	Description
1	30500-ZE2-023	1	COIL ASSY., IGNITION (Honda Code 4545927).
2	30700-ZE1-013 GZX240KT HA ENGINE, JPN, VIN# GC04-300001 TO GC04-394428 of 38 IGNITION COIL	1	CAP ASSY., NOISE SUPPRESSOR (Honda Code 3526837).
4	31512-ZE2-000	1	GROMMET, WIRE (Honda Code 2026557).
7	36101-ZE1-010	1	WIRE, STOP SWITCH (370MM) (Honda Code 3684032).
10	90015-883-000	2	BOLT, FLANGE (6X28) (Honda Code 0636852).

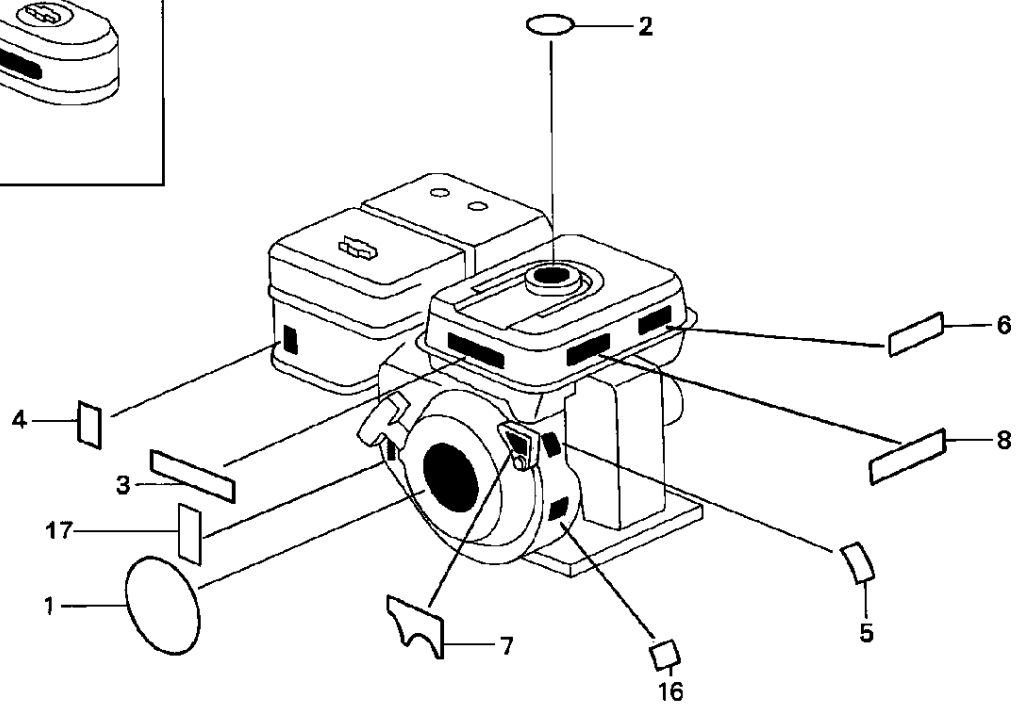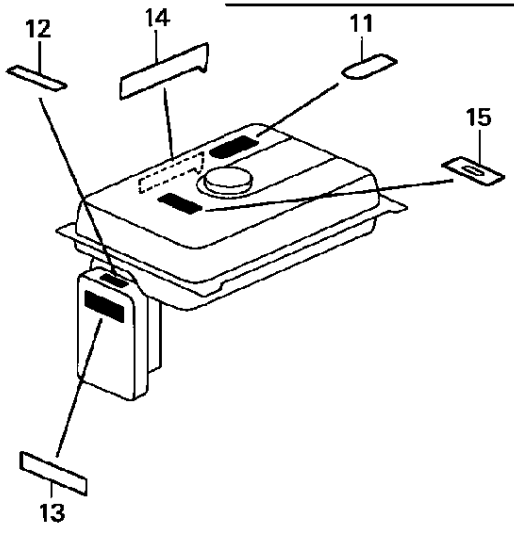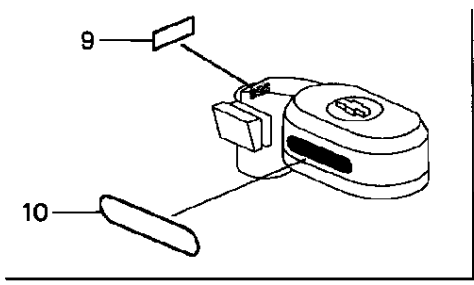

Ref #	Part Number	Qty	Description
1	87521-ZE2-W01	1	EMBLEM (INTERNAL) (Honda Code 4214169).
2	87522-ZE1-810	1	MARK, CAUTION (EXTERNAL) Use up to Engine SN 3254423. (Honda Code 1431014).
	GX240KT HA ENGINE, JPN, VIN# GC04-300001 TO GC04-394450 of 36		
	LABELS		
3	87522-ZH9-000	1	LABEL, CAUTION (Honda Code 3684206).
4	87528-ZE2-810	1	MARK, CHOKE (EXTERNAL) (Honda Code 2026979).
5	87530-ZE2-W10	1	LABEL, SPECIFICATION (EXTERNAL) Use up to Engine SN 3165402. (Honda Code 3679016).
6	87532-ZB4-G60	1	MARK, OIL ALERT (GERMAN) Use from Engine SN 3171791. (Honda Code 4425443).
7	87532-ZE1-810	1	MARK, OIL ALERT (EXTERNAL) Use up to Engine SN 3116814. (Honda Code 1540988).
8	87532-ZH8-810	1	MARK, OIL ALERT (E) Use from Engine SN 3116815. (Honda Code 4193355).
16	87532-ZB4-H50	1	MARK, OIL ALERT (FRENCH) Use from Engine SN 3171791. (Honda Code 4425450).



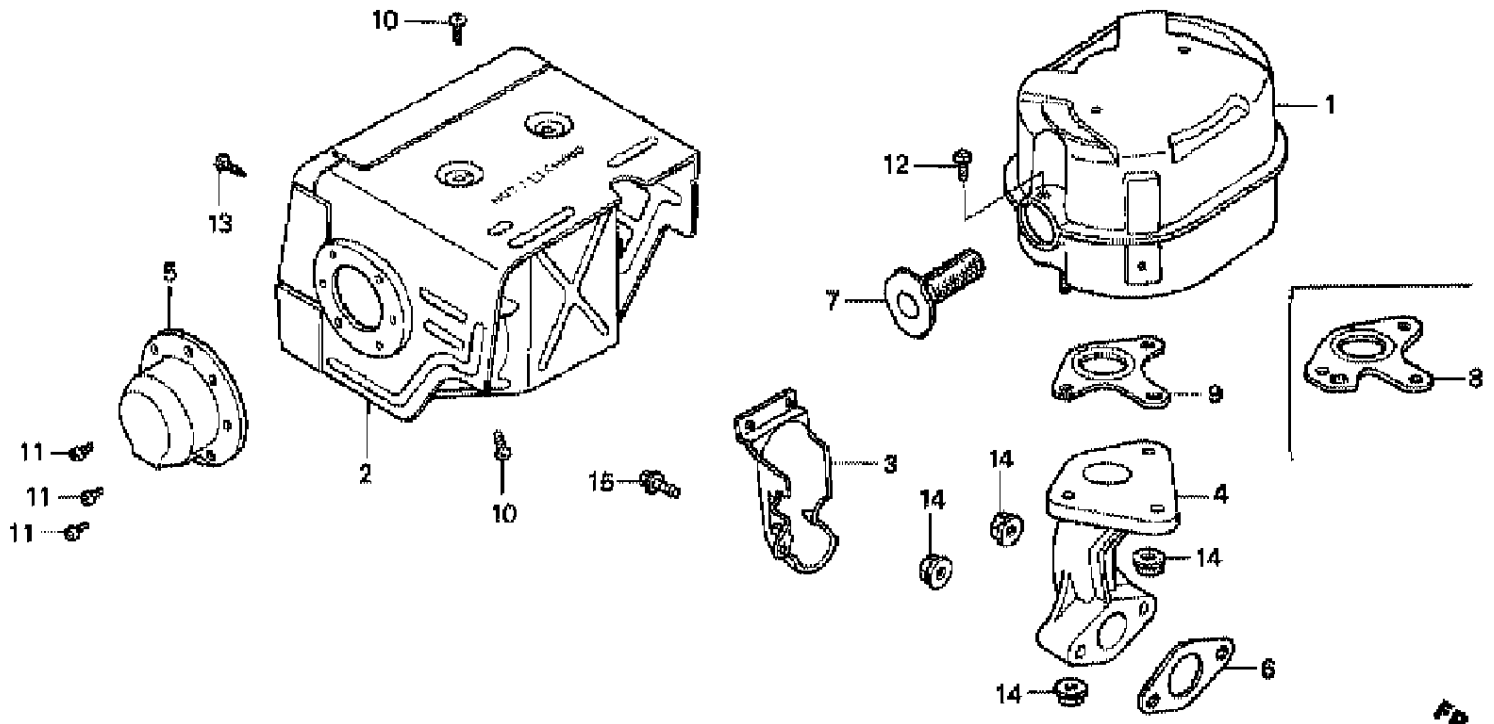


2B26-21600 A

FR.

Ref #	Part Number	Qty	Description
1	18310-ZE2-W00	1	MUFFLER (Honda Code 3678745).
2	18320-ZE2-W01	1	PROTECTOR, MUFFLER (Honda Code 4613642).
3	18323-ZE2-W00	1	PROTECTOR, EX. PIPE (Honda Code 3678786).
4	18330-ZE2-W00	1	PIPE, EX. (Honda Code 3678794).
5	18331-ZE2-810	1	CAP, MUFFLER (Honda Code 2026227).
6	18333-ZE3-800	1	GASKET, EX. PIPE (Honda Code 3520194).
6	18333-ZK6-Y00	1	GASKET, EX. PIPE (WACKER) (Honda Code 5164199).
7	18355-ZE2-010	1	ARRESTER, SPARK (Optional). (Honda Code 2482594).
8	18381-ZE2-W10	1	GASKET, MUFFLER (ARRESTER) (Optional). (Honda Code 3678802).
9	18381-ZE2-800	1	GASKET, MUFFLER (Honda Code 3678810).
10	90050-ZE1-000	5	SCREW, TAPPING (5X8) (Honda Code 1431105).
11	90055-ZE1-000	3	SCREW, TAPPING (4X6) (Honda Code 1431121).
12	90055-ZE1-000	1	SCREW, TAPPING (4X6) (Optional). (Honda Code 1431121).
14	94050-08000	5	NUT, FLANGE (8MM) (Honda Code 0481143).
15	90013-883-000	1	BOLT, FLANGE (6X12) (CT200) (Honda Code 0636845).


3XZ46KT HA ENGINE, JPN, VIN# GC04-3000001 TO GC04-3948843 of 36

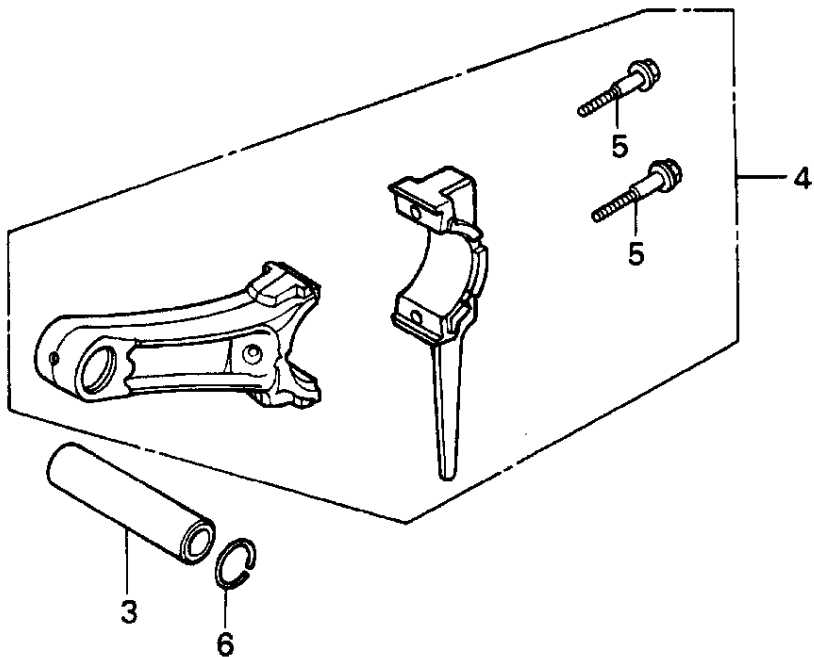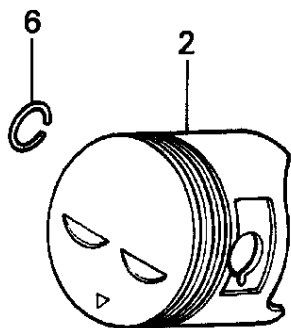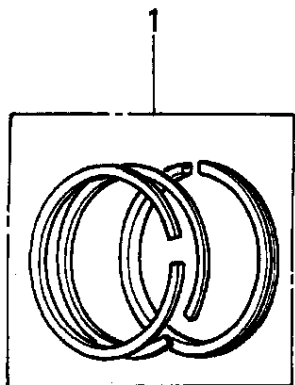

FR. →

Ref #	Part Number	Qty	Description
1	13010-ZE2-013	1	RING SET, PISTON (STD) (Honda Code 3023488).
1	13011-ZE2-013	1	RING SET, PISTON (OS 0.25) (Optional). (Honda Code 3023496).
1	13012-ZE2-013	1	RING SET, PISTON (OS 0.50) (Optional). (Honda Code 3017894).
1	13013-ZE2-013	1	RING SET, PISTON (0.75) (Optional). (Honda Code 3017910).
2	13101-ZE2-W00	1	PISTON (STD) (Honda Code 3678547).
2	13102-ZE2-W00	1	PISTON (OS 0.25) (Optional). (Honda Code 3678554).
2	13103-ZE2-W00	1	PISTON (OS 0.50) (Optional). (Honda Code 3678562).
2	13104-ZE2-W00	1	PISTON (0.75) (Optional). (Honda Code 3678570).
3	13111-ZE2-000	1	PIN, PISTON (Honda Code 2025484).
4	13200-ZE2-000	1	ROD ASSY., CONNECTING (STD) (Honda Code 2025492).
4	13200-ZE2-305	1	ROD ASSY., CONNECTING (US 0.25) (Optional). (Honda Code 2110153).
5	90001-ZE8-000	2	BOLT, CONNECTING ROD (Honda Code 2160489).
6	90551-ZE1-000	2	CLIP, PISTON PIN (18MM) (Honda Code 2539120).

GX240RT HA ENGINE, JPN, VIN# GC04-3060001 TO GC04-394643 Page 13 of 30

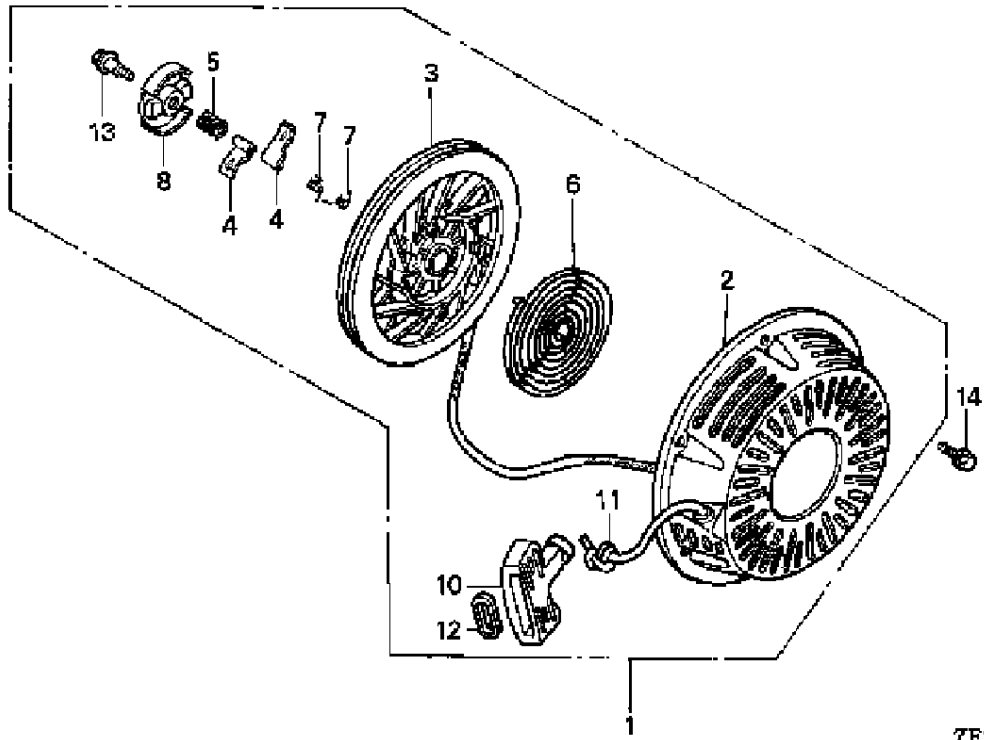

ZF28-E1100A

FR. 

Ref #	Part Number	Qty	Description
1	28400-ZE2-W01ZA	1	STARTER ASSY., RECOIL *R8* (BRIGHT RED) (Honda Code 3678844).
GX240K1 HA ENGINE, JPN, VIN# GC04-300001 TO GC04-394546 of 36			
1	28400-ZE2-W01ZB	1	STARTER ASSY., RECOIL *NH1* (BLACK) Use from Engine SN 3139635. (Honda Code 4220315).
2	28410-ZE2-W01ZA	1	CASE, RECOIL STARTER *R8* (BRIGHT RED) (Honda Code 3678851).
2	28410-ZE2-W01ZB	1	CASE, RECOIL STARTER *NH1* (BLACK) Use from Engine SN 3139635. (Honda Code 4220323).
3	28421-ZE2-W01	1	PULLEY, RECOIL STARTER (Honda Code 3678869).
4	28422-ZE2-W01	2	RATCHET, STARTER (Honda Code 3678877).
5	28441-ZE2-W01	1	SPRING, FRICTION (Honda Code 3678885).
6	28442-ZE2-W01	1	SPRING, STARTER RETURN (Honda Code 3678893).
7	28443-ZE2-W01	2	SPRING, RATCHET (Honda Code 3678901).
8	28444-ZE2-W01	1	RETAINER, SPRING (Honda Code 3678919).
10	28461-ZE2-W02	1	GRIP, STARTER (Honda Code 6133649).
11	28462-ZE2-W01	1	ROPE, RECOIL STARTER (NA USE ALT:08550-ZG921-11) (Honda Code 3678968).
12	28469-ZE2-W01	1	GRIP, REINFORCEMENT (Honda Code 3678976).
13	90004-ZE2-W01	1	SCREW, CENTER (Honda Code 3679024).
14	90011-ZG0-000	3	BOLT, FLANGE (6X8) (Honda Code 1795723).